



www.gillathletics.com
800-637-3090

E49872 - ELECTRONIC TWO DIGIT DISPLAY INSTRUCTIONS

Uses:

- Lap Counter Display
- PV Standard Settings Display
- Wind Speed Display

Contents:

- Two Digit Display
- AC Power Cord to Connect to 120V outlet (REPL49000)
- Tripod
- Rain Cover
- Foam Lined Carry Case

Operation:

The Electronic Two Digit Display is controlled using the on-board keypad.

There are two modes of operation: LAPS and DISPLAY.

To change modes, just press the corresponding button on the keypad.

CLEAR will reset the display, but it will stay in the same mode.

LAPS Mode:

Press numbers to change the display.

Press the "+" or "-" buttons increase or decrease the current value by one.

The "." button has no affect.

DISPLAY Mode:

Press numbers to change the display.

Press the "+" or "-" buttons to toggle the "+" and "-" symbols on and off.

Press the "." button to toggle the "." on and off.

The brightness button toggles the LEDs through three brightness levels.

Lowering the brightness can increase battery life.

Care Instructions:

- Keep the Electronic Two Digit Display dry.
- Fully charge the battery before putting it into storage.
- It is recommended to recharge the battery approximately every 4 weeks, or to keep the unit plugged in while in storage.



THIS WARNING IS GIVEN IN COMPLIANCE
WITH CALIFORNIA'S PROPOSITION 65:

WARNING

This product contains chemicals known to the
State of California to cause cancer, birth defects
or other reproductive harm.