





www.gillathletics.com
800-637-3090

E39917 - FINISH LINE CAMERA POLE INSTRUCTIONS


Tool List:

- (2) Persons
- (1) 7/16" Socket
- (1) 7/16" Wrench
- (2) 3/4" Wrench
- (2) 15/16" Wrench

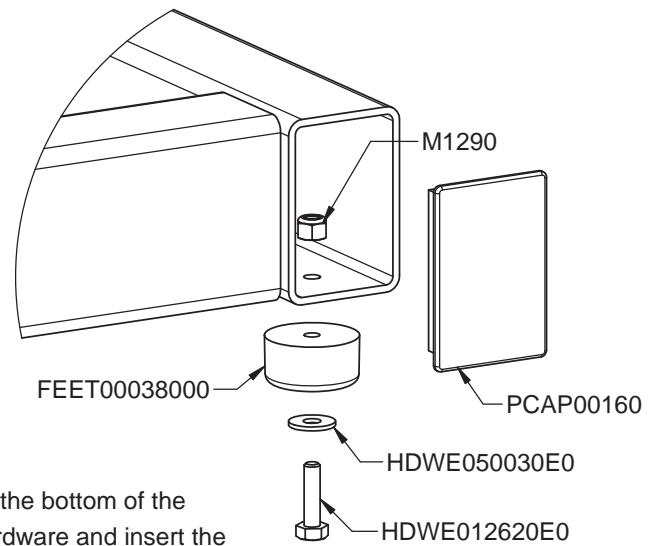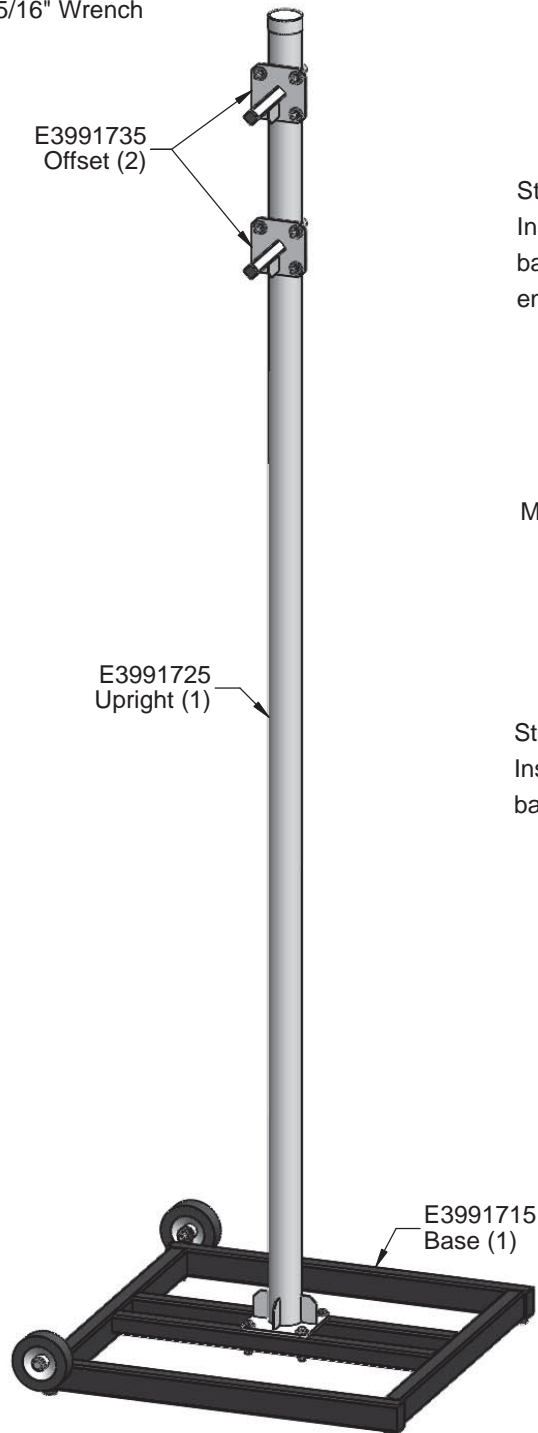

Step 1:

Install the feet on the bottom of the base with 1/4" hardware and insert the end plugs into the ends of the tubes.

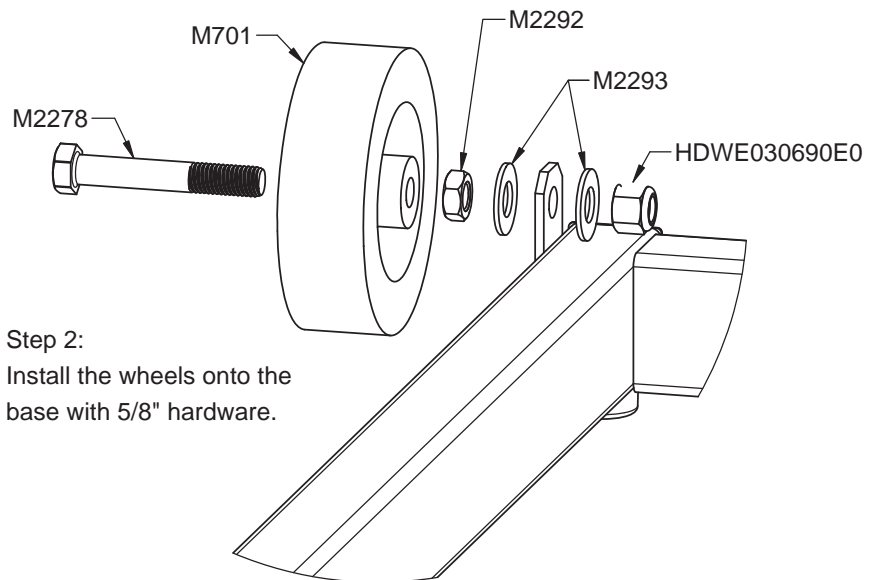

Step 2:

Install the wheels onto the base with 5/8" hardware.


PART NUMBER	Description	QTY.
M701	6 X 2 WHEEL BALL BEARING 5/8 BORE	2
M2293	Flat Washer 5/8	4
FEET00038000	Rubber Bumper	4
M1290	1/4-20 Nylock Hex Nut	4
HDWE012620E0	1/4-20 1" long hex bolt	4
M2292	5/8-11 Jam Nut, Zinc Plated	2
HDWE050030E0	1/4" Flat Washer	4
M2278	5/8"-11 Hex Bolt Gr5	2
PCAP00160	2 x 3 End Plug Camera Pole Base	4




www.gillathletics.com
800-637-3090

E39917 - FINISH LINE CAMERA POLE INSTRUCTIONS

Step 3:
Bolt the upright to the
base with 1/2" hardware.

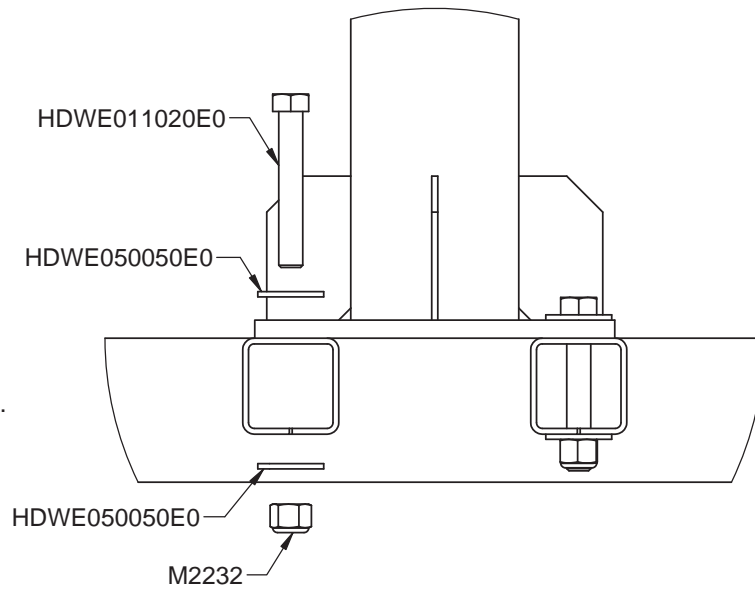

Step 4:
Use the u-bolts and 1/2" nuts to
mount the offsets to the upright.

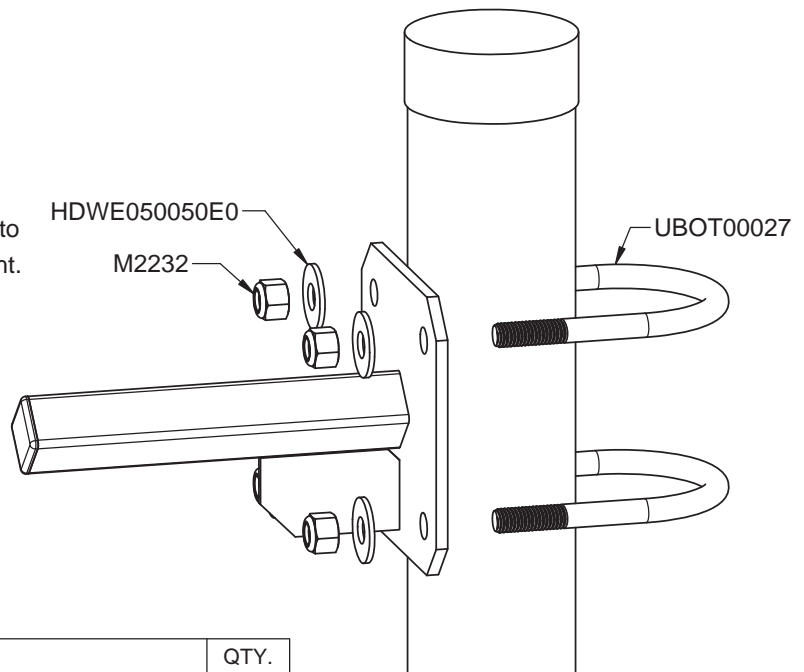

PART NUMBER	Description	QTY.
UBOT00027	U-BOLT 1/2"-13 FOR 3-1/2" OD ZINC PLATED	4
HDWE050050E0	1/2" Flatwasher	16
M2232	1/2"-13 Nylock Hex Nut	12
HDWE011020E0	Hex Bolt 1/2-13 x 3.25 Zinc Plated GR 5	4
M4751	1.25" SQ end plug, blk (14-20GA)	2