




www.gillathletics.com  
800-637-3090

## 358 - SYNTHETIC TOEBOARD for RECESSED PAD HOW TO INSTALL ON A PORTABLE SHOT / INDOOR WEIGHT RING


How to Assemble a 358 Synthetic Toeboard on a Portable Shot / Weight Platform




Tools Needed:

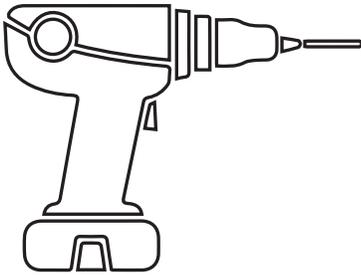

DRILL  
9/16" DRILL BIT

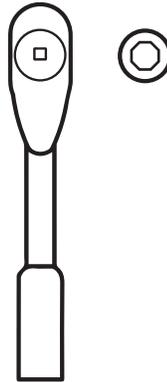

SOCKET WRENCH  
3/4" SOCKET

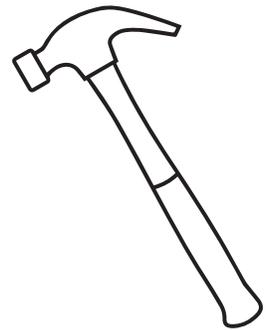

HAMMER

### NOTICE

All installations should be done by experienced contractors and in accordance with all applicable codes, laws and regulations. Suggested installation instructions herein are illustrative only and should be adapted to suit local requirements. GILL Athletics is not responsible for the manner in which these products are installed.



www.gillathletics.com  
800-637-3090

## 358 - SYNTHETIC TOEBOARD for RECESSED PAD HOW TO INSTALL ON A PORTABLE SHOT / INDOOR WEIGHT RING

### STEP 1: ELEVATE PLATFORM SECTION


Raise platform section off of the floor to allow for drilling through without damaging your flooring.



### STEP 2: LINE UP TOEBOARD ON PLATFORM

Using the toeboard as a template, mark the center of the holes to be drilled for the bolts.

Be sure the toeboard is properly positioned with the inside curved edge of the toeboard even with the inner edge of the ring.

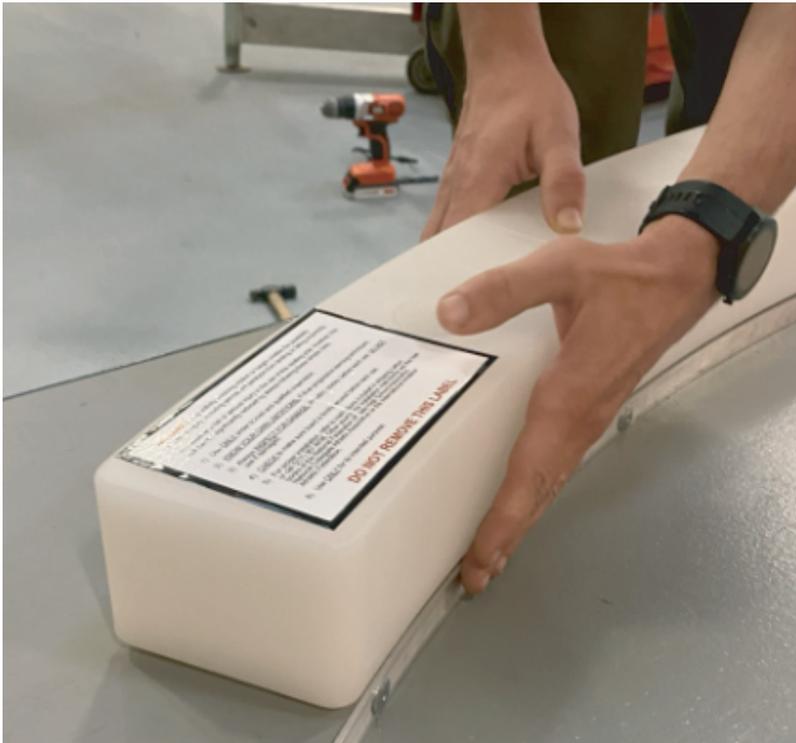




www.gillathletics.com  
800-637-3090

## 358 - SYNTHETIC TOEBOARD for RECESSED PAD HOW TO INSTALL ON A PORTABLE SHOT / INDOOR WEIGHT RING

### STEP 3: DRILL HOLES INTO PLATFORM

Using a 9/16" drill bit, carefully drill through the pre-existing hole in the toeboard and all the way through the wood.

Do this for both holes in the toeboard.

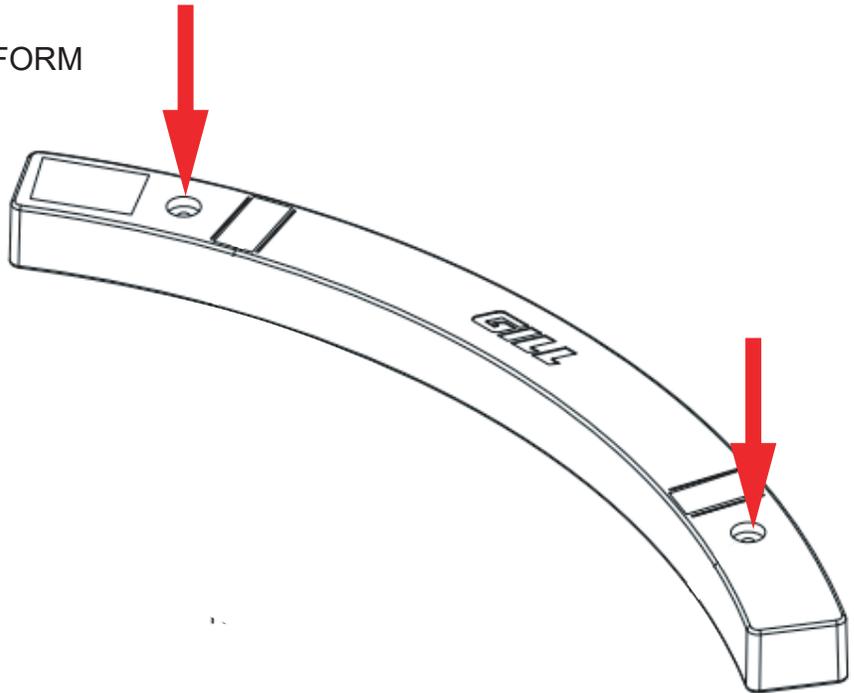



www.gillathletics.com  
800-637-3090

## 358 - SYNTHETIC TOEBOARD for RECESSED PAD HOW TO INSTALL ON A PORTABLE SHOT / INDOOR WEIGHT RING

### STEP 4: FLIP OVER PLATFORM

Flip platform over to find the 2 holes just drilled.





www.gillathletics.com  
800-637-3090

## 358 - SYNTHETIC TOEBOARD for RECESSED PAD HOW TO INSTALL ON A PORTABLE SHOT / INDOOR WEIGHT RING

### STEP 5: HAMMER IN THREADED INSERTS



Position the threaded insert so that the teeth are facing into the wood.

Begin by gently hammering threaded insert into the hole to make sure it goes in straight.

Once started, you can use the hammer with more force to make the teeth of the insert fully engage into the wood.



ORIENTATION OF INSERT  
CRITICAL

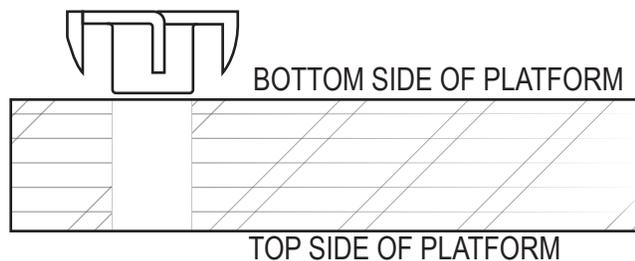



www.gillathletics.com  
800-637-3090

## 358 - SYNTHETIC TOEBOARD for RECESSED PAD HOW TO INSTALL ON A PORTABLE SHOT / INDOOR WEIGHT RING



### STEP 6: SECURE TOEBOARD TO PLATFORM

Flip the platform back over so the top is facing up.

Using a 3/4" socket, begin fastening the toeboard with the 1/2"-13 x 4" hex bolts and 1/2" flat washers provided.

Do not overtighten, should be hand-tight.

