

# No. 00956-100 VOLLEYBALL TRANSPORTER ASSEMBLY INSTRUCTIONS


## PARTS LIST

Item No.	Qty.	Description	Item No.	Qty.	Description
1	2	SIDE FRAME	6	2	CASTER (WITH RELEASE BRAKE)
2	2	SPREADER TUBE	7	4	SHORT BUTTON HEAD SOCKET SCREW
3	1	BOTTOM SHELF	8	4	LONG BUTTON HEAD SOCKET SCREW
4	1	POCKET	9	8	WASHER
5	2	CASTER	10	1	VINYL SLEEVE

TOOLS REQUIRED: M6 Hex Key

1. Unpack all components and check against Parts List to ensure that all have been included.
2. Slide two spreader tubes (2) through sewn hems on pocket (4).
3. Assemble pocket (4) (with spreader tubes) to both side frames (1) using four short button head socket screws (7), and four washers (9). Spreader tubes may need tapped into place.
4. Attach bottom shelf (3) to both side frames (1) using four long button head socket screws (8), and four washers (9).
5. Fasten two casters (5) to one side frame (1). Fasten the remaining two casters with release breaks (6) to opposing side frame (1).
6. Flaps on pocket (4) have Velcro "hook" strips sewn to them, with pieces of Velcro "pile" strips attached directly to side frame. Secure the flaps to the side frames. See Detail "A".
7. Assembly is now complete.

Detail "A"

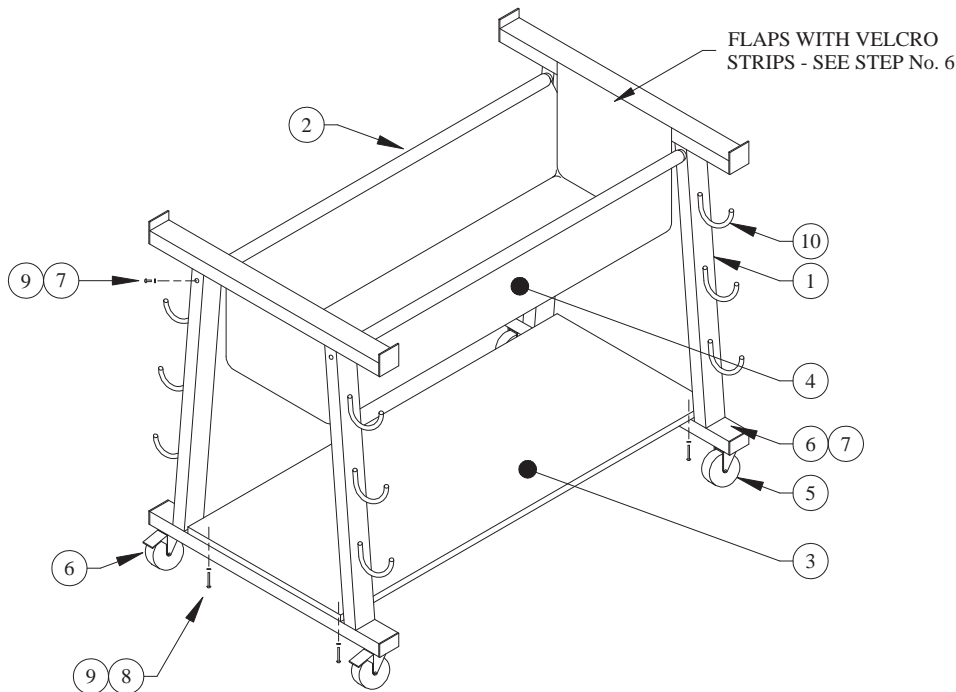

**WARNING:** This product can expose you to Titanium Dioxide, which is known to the State of California to cause cancer. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

SAVE THESE INSTRUCTIONS FOR FUTURE USE