


Net Attachment Assembly:

1. At the desired net height install the eye bolt through the hole and secure it to the pole with the eye nut.
2. Repeat for bottom net attachment point.

⚠ WARNING: This product can expose you to Titanium Dioxide, which is known to the State of California to cause cancer. For more information go to www.p65warnings.ca.gov.

Base to Upright Assembly:

1. Slide the upright into the base.
2. Align the top hole in the upright with the small, un threaded hole in the base.
3. Install the long hex bolt all the way through the upright and tighten down with a 16MM wrench.
4. Install the spring pin through the base into the upright. Hammer into place.
5. Fully secure the upright in place by tightening the small hex bolt against the upright using the 16mm wrench.

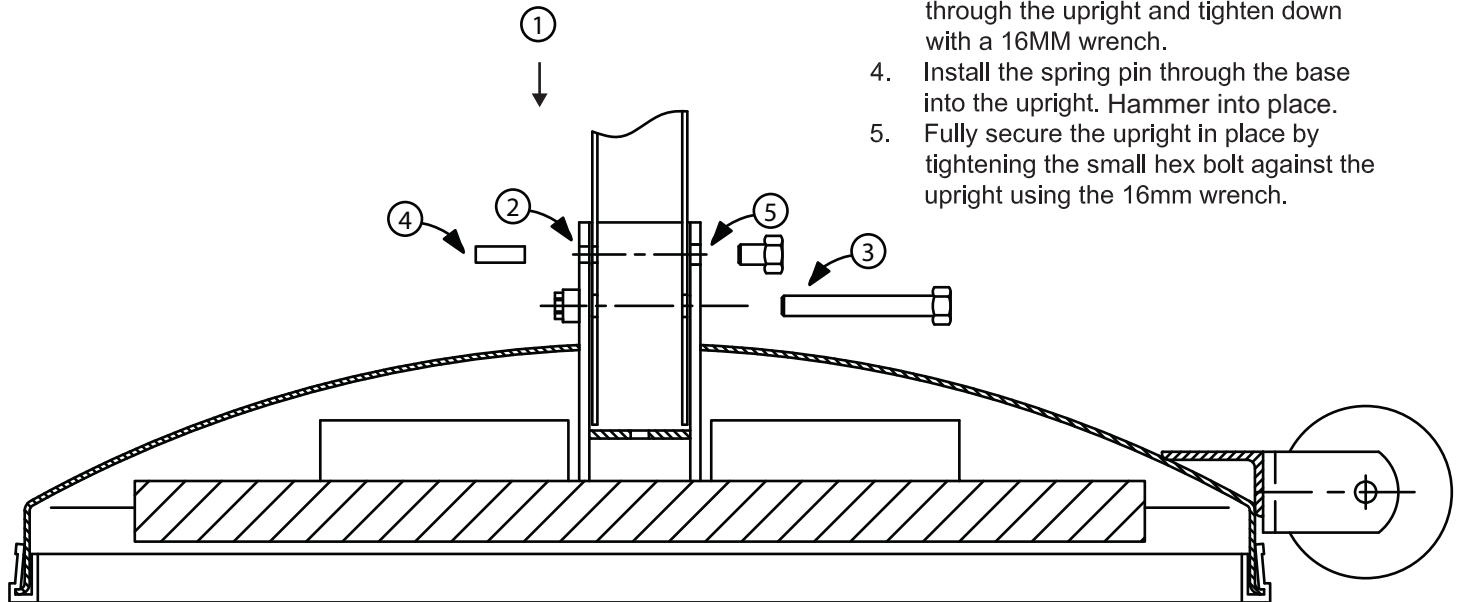

Wheel Assembly:

1. Slide wheel bolt with washer through base and wheel
2. Put second washer over bolt and secure in place with lock nut. Use two 16mm wrenches.

