



INSTALLATION DETAILS FOR PADS



WARNING

READ ALL INSTRUCTIONS THOROUGHLY BEFORE BEGINNING INSTALLATION OF THESE PADS.

CORNER PADS AND I-BEAM PADS

No. 355 and 356

To comply with the sports rules and industry standards while providing the safest possible environment in this facility, you must adhere to the following specification when installing Porter pads:


The **American Society for Testing and Materials (ASTM)** has established Standard Specification F2440-04, which sets precise recommendations on the installation of protective padding. Padding is typically installed no more than 4 in. from the floor up to 6 ft. *.

See Detail "A" at right.

* For more information, visit the ASTM International website: www.astm.org/.

NEVER install pads more than 4" above the finished floor! See Detail "A". If directed to install pads higher than 4" above the floor, **STOP WORKING IMMEDIATELY** and contact your local Porter representative.

WARNING: This product can expose you to Urethane, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.p65warnings.ca.gov.

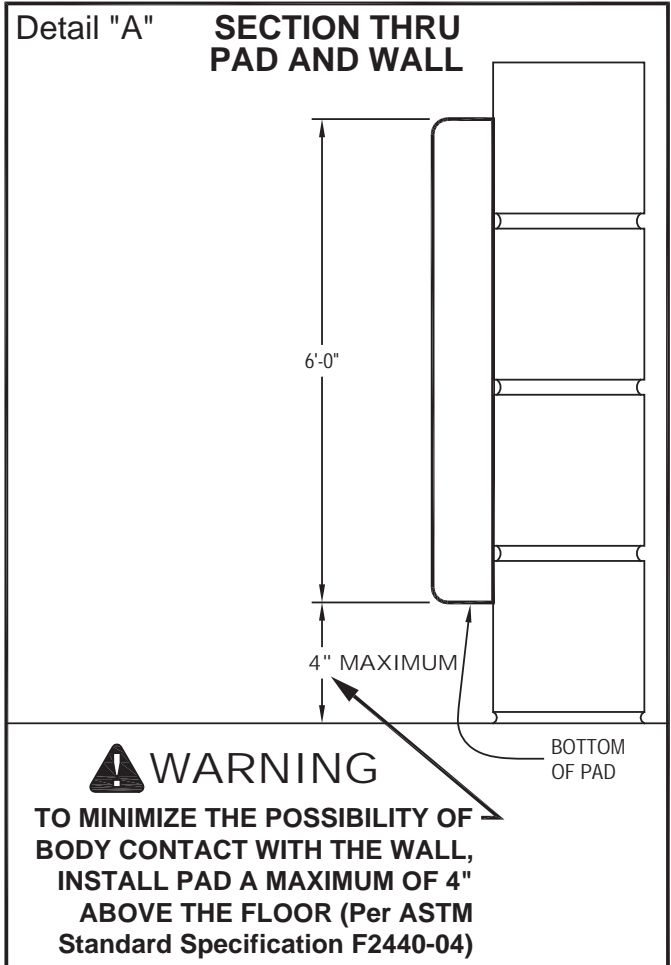


Continued On Other Side.....

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

ADDITIONAL INSTALLATION NOTES

1. These pads are supplied with peel-and-stick Velcro strips (attached to the pad) that must be applied to the wall surface. Clean the wall surface thoroughly where the Velcro strips will be applied. Hold the pad up to the wall or i-beam to mark the location of the Velcro strips. Remove the Velcro strips from the pad and apply to the wall. Press firmly to burnish the Velcro strips onto the wall. Allow the Velcro adhesive to cure for several hours before installing the pad on the wall. **NOTE – DO NOT** apply the Velcro strips to the wall while they are still attached to the pad – the pad may cause the Velcro strips to pull away from the wall before the adhesive has cured.
2. If pads are being installed on painted walls, check to make sure the paint is fully cured before applying the Velcro strips. **DO NOT** apply the Velcro strips to surfaces where the paint has not fully cured – the Velcro will not adhere.
3. See Detail "B" for additional information about pad installation.

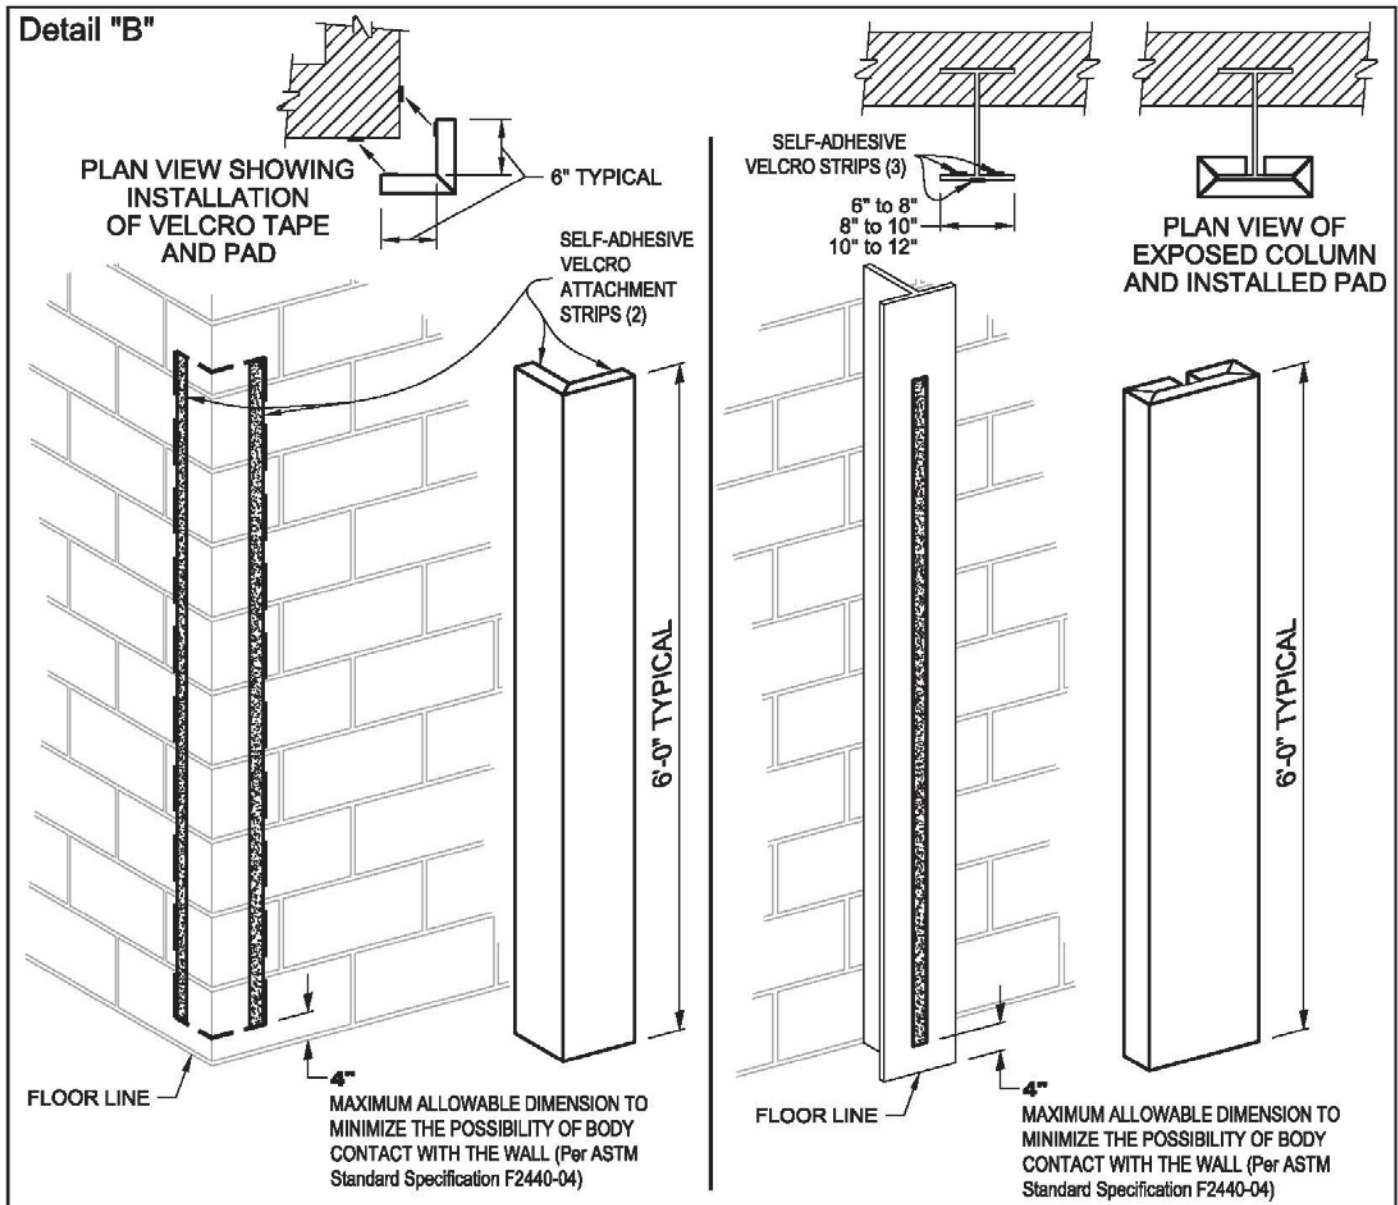

porter

Porter Athletic, Inc.
601 Mercury, Champaign, IL 61822
Phone: 888-277-7778 • Fax: 217-239-2255
www.porterathletic.com