

INSTALLATION INSTRUCTIONS


EQUIPMENT LEGEND

No. 92500-000

PARTS LIST			
Item No.	Part No.	Quantity	Description
1	Custom	1	Printed Equipment Legend
2	COVR 00069 000	1	Acrylic Cover
3	HDWE 06144 0E0	4	#10 x 1-1/2" Lg. Flat Head Sheet Metal Screw
4	HDWE 55058 0E0	4	#10 Finishing Washer
5	HDWE 58001 000	4	Vinyl Anchor

1. Check all items against Parts List above to ensure that all parts and hardware are available to complete the installation.
2. Determine location of Equipment Legend. Typically it will be located on the wall adjacent to the equipment controls (Powr-Touch™ keypad, key switch, etc.). Consult with owner or facility manager to select location of legend.
3. Carefully hold up the Acrylic Cover on the wall in its proper location, making sure it is level and at the correct height. Using the four pre-drilled holes in the Acrylic Cover, mark the wall for the anchor locations.
4. Drill the four holes into the wall at the marks from Step No. 3. Note – Anchors and hardware are supplied for use with masonry walls. Drill a 1/4" diameter hole 1" deep for these anchors. Other types of anchors (not supplied) may be required, depending on the wall construction.
5. Carefully tap the four anchors into the holes from Step No. 4.
6. Remove the protective paper from both sides of the Acrylic Cover.
7. On a piece of scrap corrugated cardboard, lay the Printed Equipment Legend face-up. Carefully place the Acrylic Cover on top of it. Be sure the top and bottom edges of the cover are flush with the top and bottom of the legend. Also center the cover left-to-right on the legend – there should be 1/2" between the edges of the legend and the edges of the cover. See Detail "A" on opposite side.
8. Install the finishing washers on the four mounting screws. Press the four mounting screws through the pre-drilled holes in the cover, and through the legend. This will keep the legend secured to the cover during the mounting process.
9. Lift the cover/legend and secure it to the wall by installing the four mounting screws into the wall anchors. **DO NOT OVERTIGHTEN** the mounting hardware, as the acrylic cover will show stress marks and may crack.
10. The installation is now complete.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

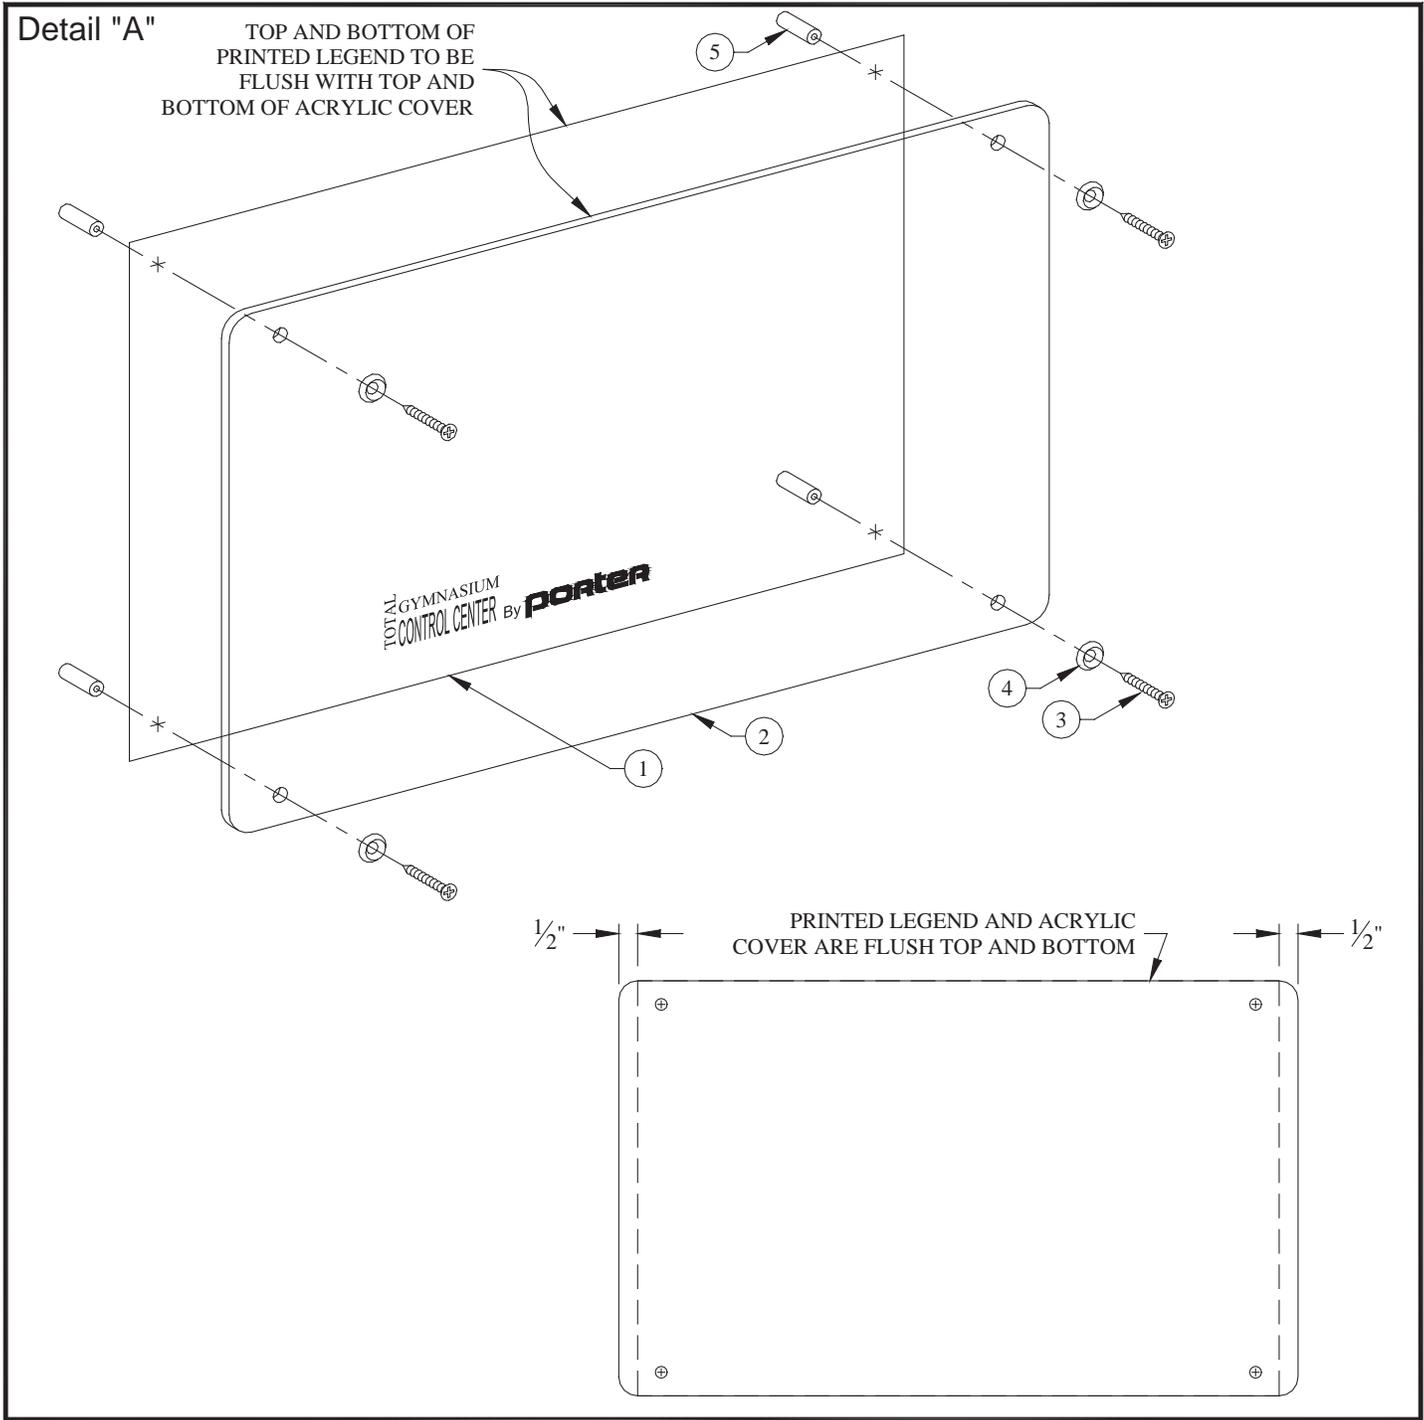

WARNING: Cancer and Reproductive Harm –
 For more information go to www.p65warnings.ca.gov

porter[®]

www.porterathletic.com
 (888) 277-7778

SAVE THESE INSTRUCTIONS FOR FUTURE USE