

porter[®]

www.porterathletic.com


888-277-7778

OHVB Pad Installation Instructions
Electric Height Adjuster




OHVB PAD INSTALLATION

ELECTRIC HEIGHT ADJUSTER

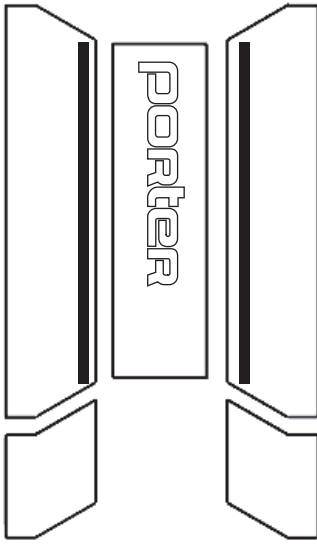


A Judges Stand
Mast Pads

PADS 404L, 404R
VINL1920400

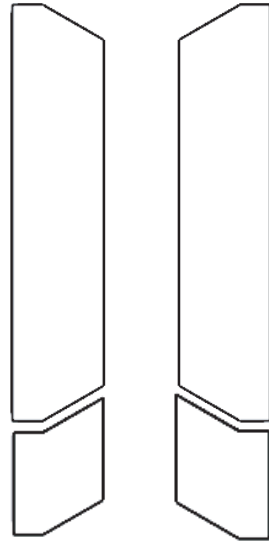


B Judges Stand
Height Adjuster

PAD 403 x2
410L, 410R

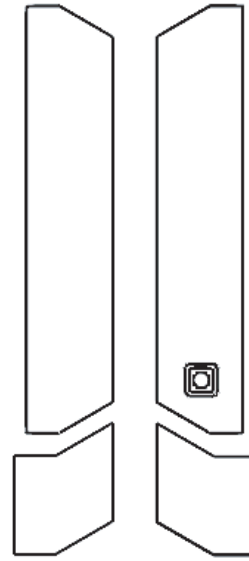


C Mast Side
Height Adjuster

PAD 401, 402
411L, 411R

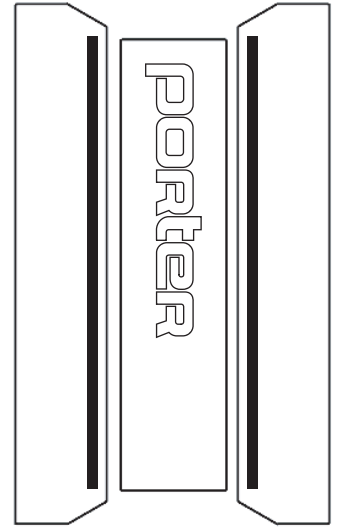

D Mast Side
Mast Pads

PADS 400L, 400R
411L, 411R
VINL1920401

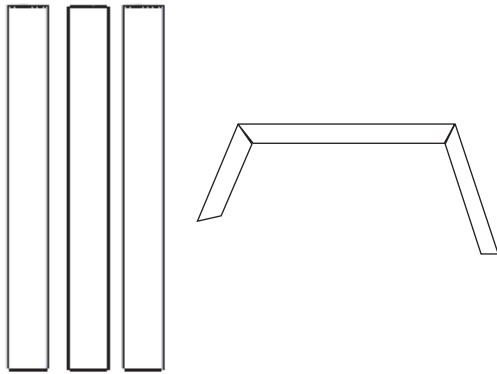

E Judges Stand Wrap Pads

PAD 454, SEWN WRAP PAD, LADDER PADS

NOTE:

Please ensure that all of the padding listed on this page arrived in the correct quantities, if not please contact Porter before moving forward.


KEY SLOT DETAIL

Use this attachment method where ever the key slot symbol appears.




A Judges Stand Mast Pads

PADS 404L, 404R, VINL1920400

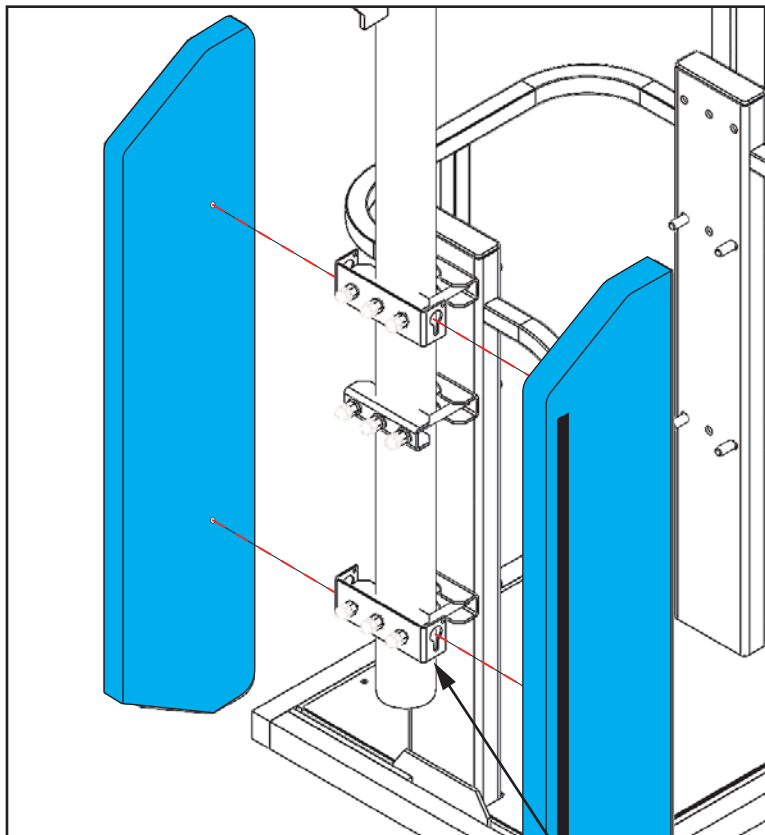


Direction of Brackets Critical

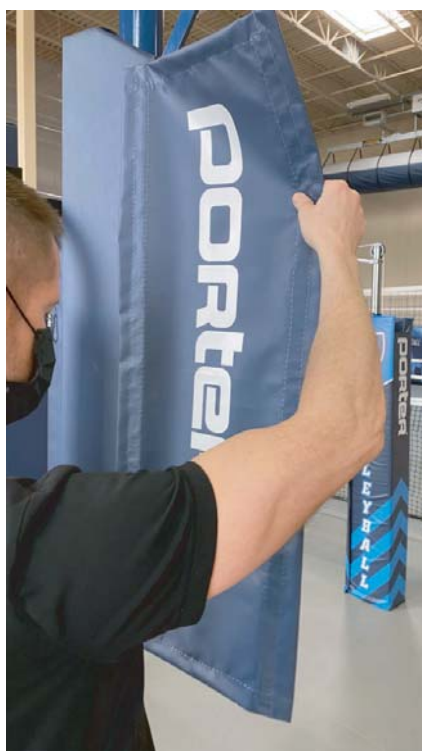

B Judges Stand Height Adjuster Pads

PADS 403 x2

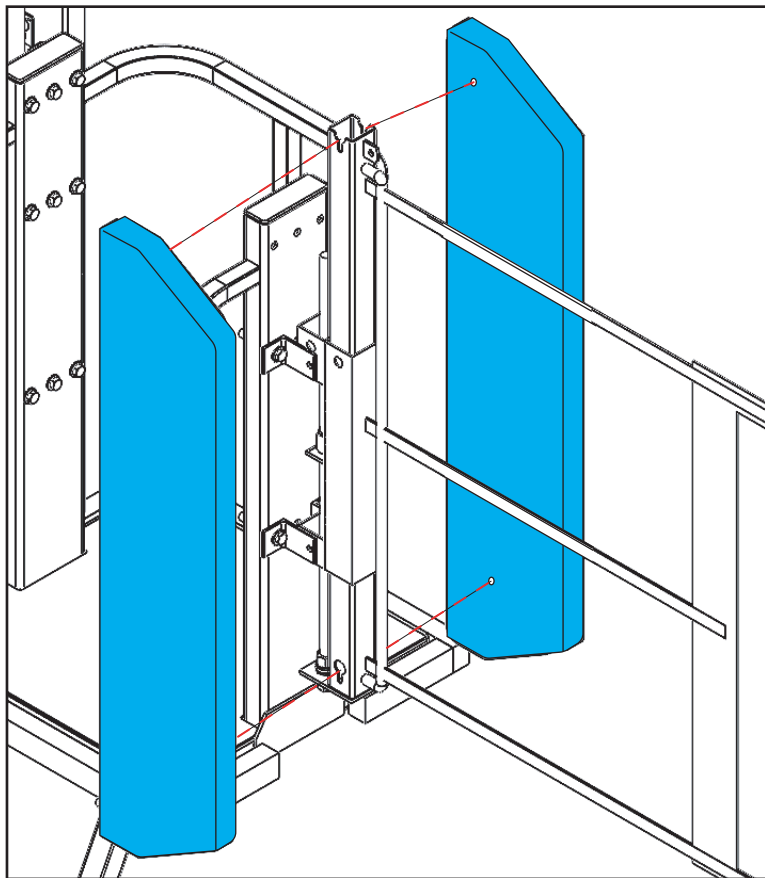


NOTE:

For tight, secure fit, loosen top bolt (as seen in picture to the right) to fit on system. Once the bottom bolt is in place then tighten top bolt with an allen wrench.



C Mast Side Height Adjuster Pads

PADS 401, 402

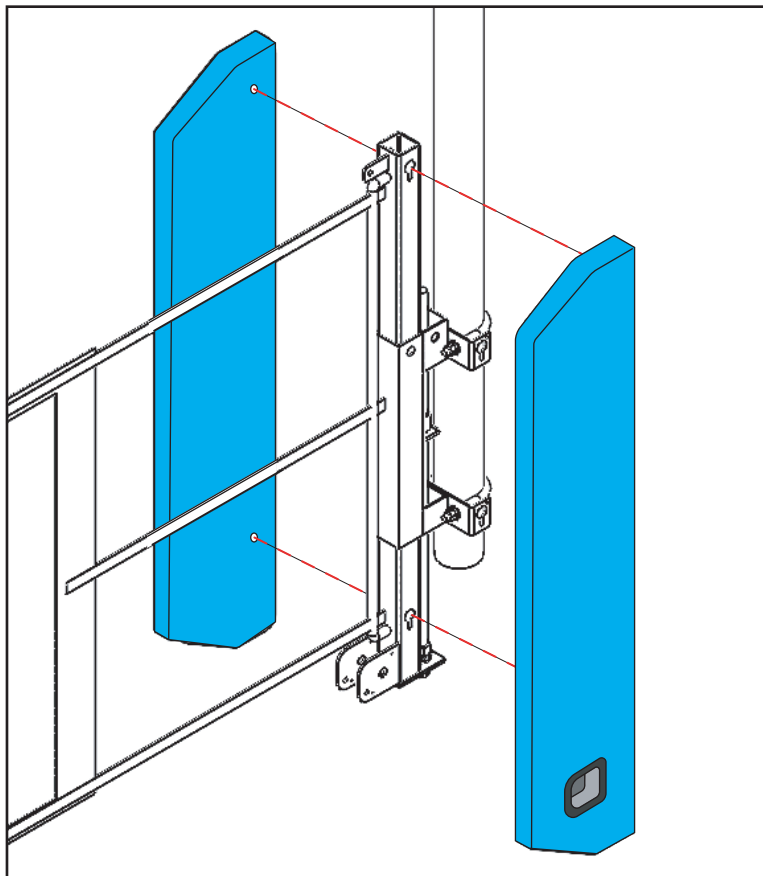


NOTE:

For tight, secure fit, loosen top bolt (as seen in picture to the right) to fit on system. Once the bottom bolt is in place then tighten top bolt with an allen wrench.



D Mast Side Mast Pads

PADS 400L, 400R, VINL1920401

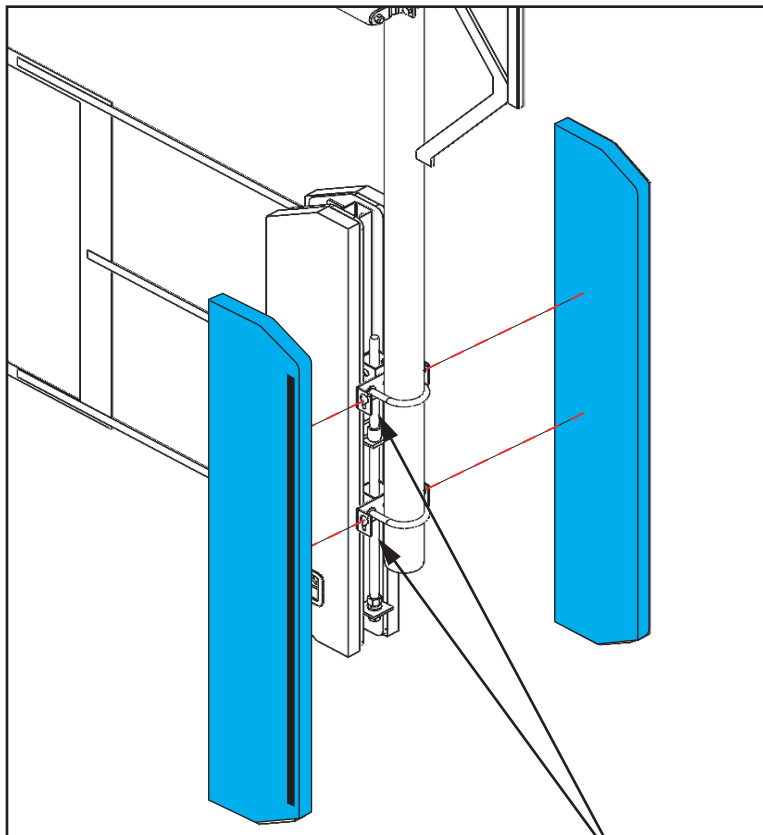


Direction of Brackets Critical



E Judges Stand Wrap Pads

PAD 454, SEWN WRAP PAD, LADDER PADS

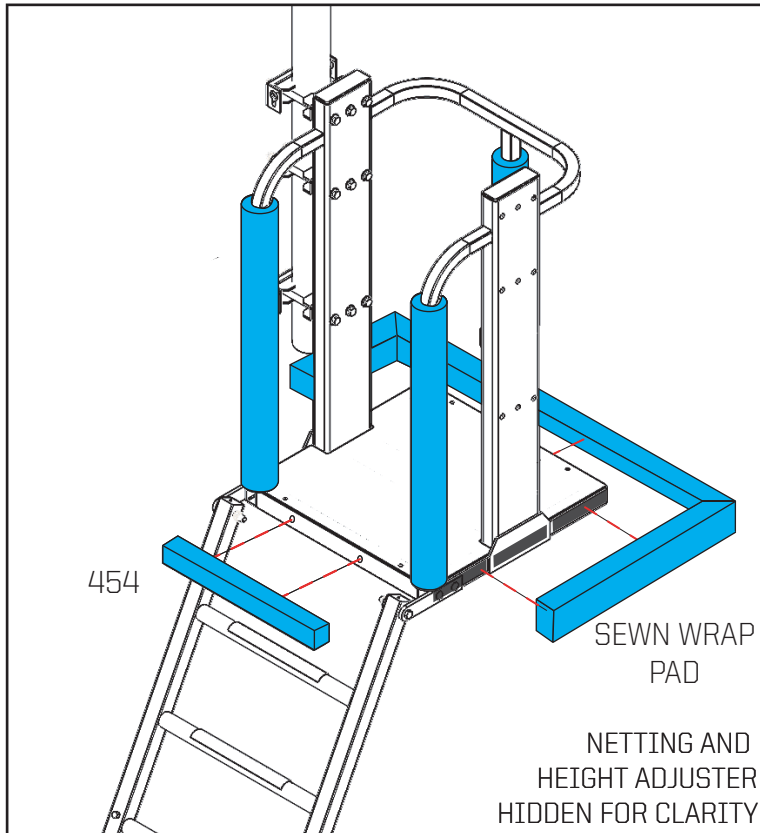

NOTE:


Wrap pads get bolted on from the underside of judges stand. Holes may need to be drilled in field for accurate fit of padding.



Wrap Padding Must Be Attached to Unit for Player Safety.

B Judges Stand Height Adjuster Pads Electric Add-On

PADS 410R, 410L

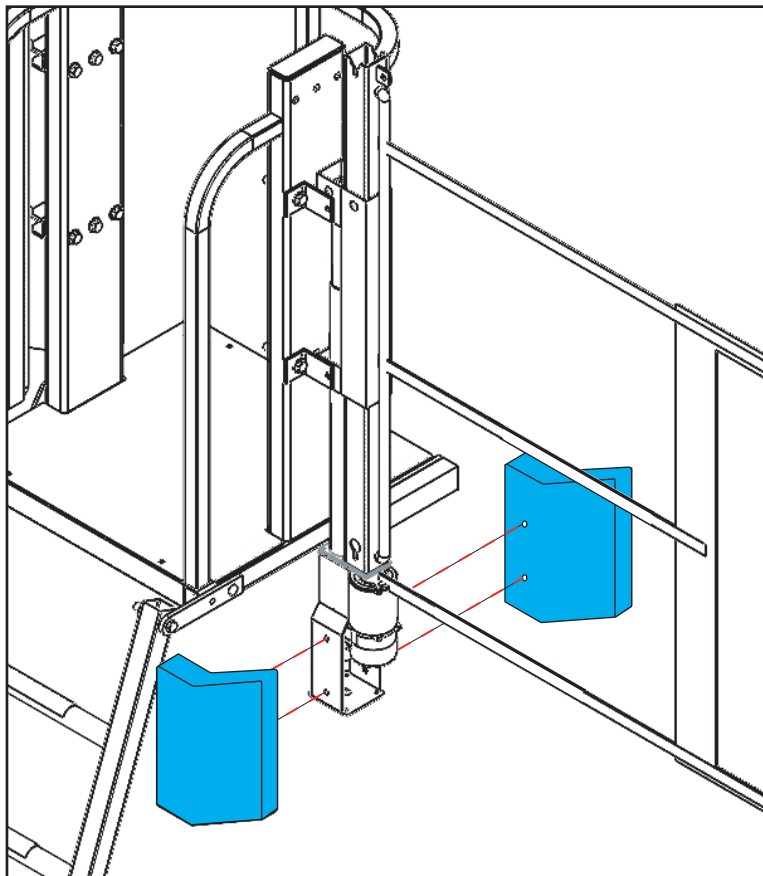


NOTE:

Start by tightening bottom bolt, once pad is attached, then line up and start upper bolt before tightening one fully.



C Mast Side Height Adjuster Pads PADS 411L, 411R

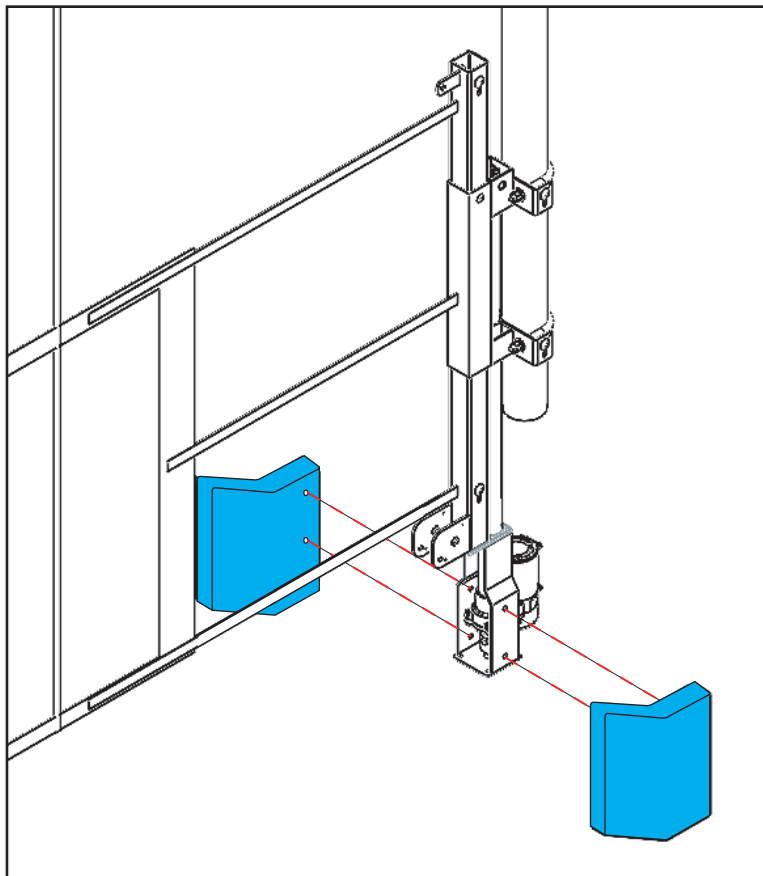

NOTE:

Start by tightening bottom bolt, once pad is attached, then line up and start upper bolt before tightening one fully.

