



www.gillathletics.com
800-637-3090

E73708 - PV/HJ LASER MEASURING STICK CUSTOMER INSTRUCTIONS

No more guess work with manual vertical measuring devices. No more getting on the ground to use a laser.




The 59" tall laser measuring stick brings the laser closer to eye level. Simply use the viewfinder to line up the crossbar and press the button.

Measurements can be taken using Metric or English units. Minimum measurement is 1.54m or 60.5". There is no maximum measurement.

Made out of light weight but strong aluminum.

The tab at the bottom allows for measuring the Pole Vault crossbar without moving the box collar.

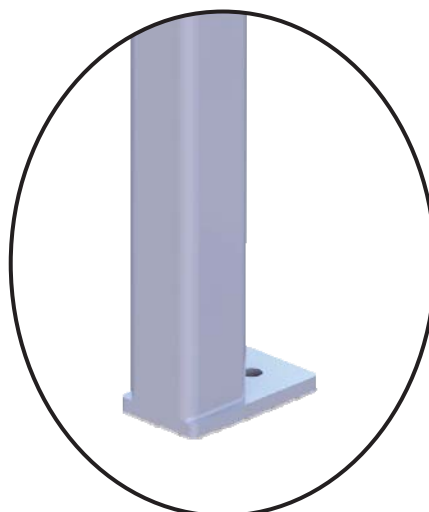



www.gillathletics.com
800-637-3090

E73708 - PV/HJ LASER MEASURING STICK CUSTOMER INSTRUCTIONS

How to Change the Units (on the Disto E7500)



1. Press the **Func** button.



2. Press the **Gears** button.



3. Arrow up to **Units**.
Press the **=** button.



4. Arrow right twice.



5. Arrow down to select **0.000m**
Press the **=** button.



6. Press the Clear button twice
to return to the main



www.gillathletics.com
800-637-3090

E73708 - PV/HJ LASER MEASURING STICK CUSTOMER INSTRUCTIONS

How to Set the Offset (on the Disto E7500)



Stick
Length
+
0.029m

1. Flip open the kickstand so that it is at 90 deg.
2. Use the laser to measure the length of the stick.
3. Write down the measurement and add 0.029m for the crossbar



4. Press the **Func** button.



5. Press the **Gears** button.



6. Arrow to **Offset**.
Press the = button.



www.gillathletics.com
800-637-3090

E73708 - PV/HJ LASER MEASURING STICK CUSTOMER INSTRUCTIONS

How to Set the Offset (continued) (on the Disto E7500)



7. Use the **Left & Right** arrows to select a decimal place.




8. Use the **Up & Down** arrows to change the value of a decimal place.



9. Press the **Check Mark**



10. Press the **Clear** button twice to return to the main

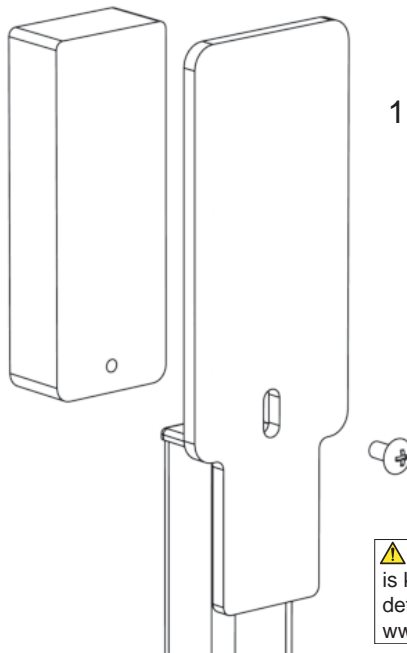

11. Mount the laser to the top of stick with the provided screw

WARNING: This product can expose you to Urethane, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.p65warnings.ca.gov.