

porter[®]

www.porterathletic.com


888-277-7778

OHVB Pad Installation Instructions
Manual Height Adjuster




OHVB PAD INSTALLATION

MANUAL HEIGHT ADJUSTER

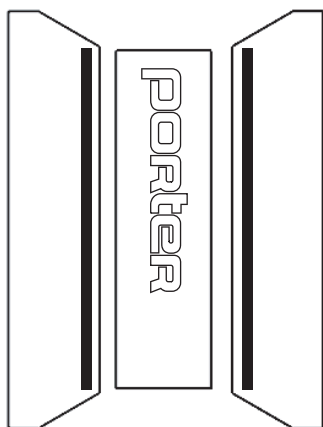


A Judges Stand
Mast Pads

PADS 404L, 404R
VINL1920400

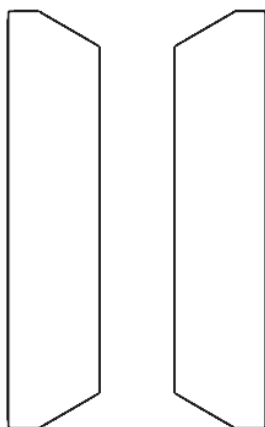


B Judges Stand
Height Adjuster

PAD 403 x2

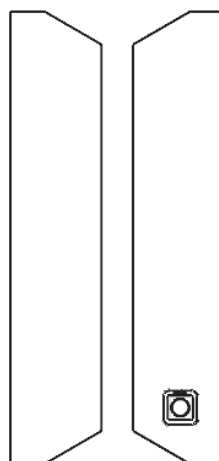


C Mast Side
Height Adjuster

PAD 401, 402

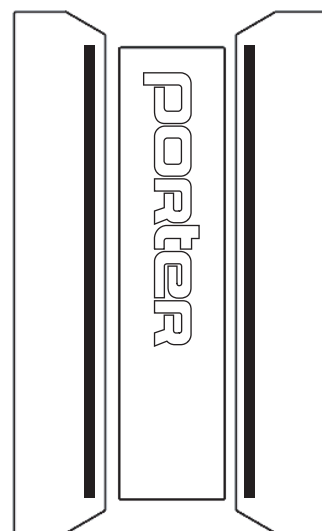

D Mast Side
Mast Pads

PAD 400L, 400R
VINL1920401

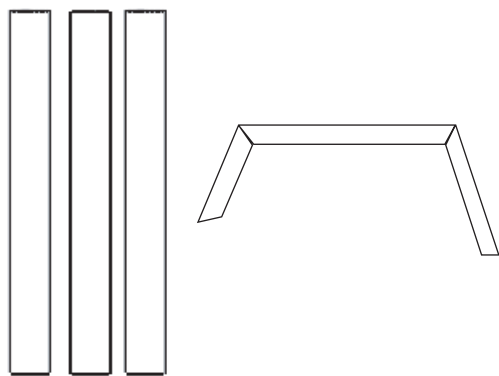

E Judges Stand Wrap Pads

PAD 454, SEWN WRAP PAD LADDER PADS

NOTE:

Please ensure that all of the padding listed on this page arrived in the correct quantities, if not please contact Porter before moving forward.


KEY SLOT DETAIL

Use this attachment method where ever the key slot symbol appears.




A Judges Stand Mast Pads

404L, 404R, VINL1920400

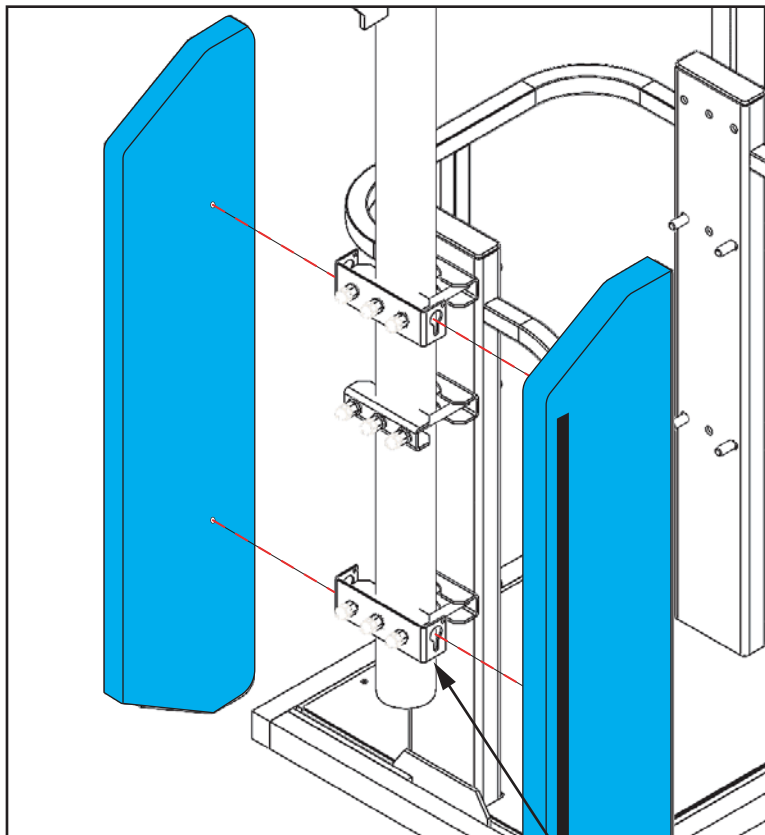


Direction of Brackets Critical

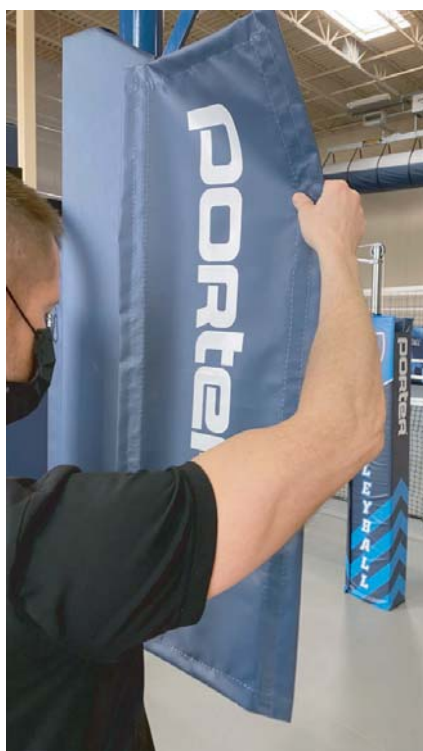

B Judges Stand Height Adjuster Pads

403 qty 2

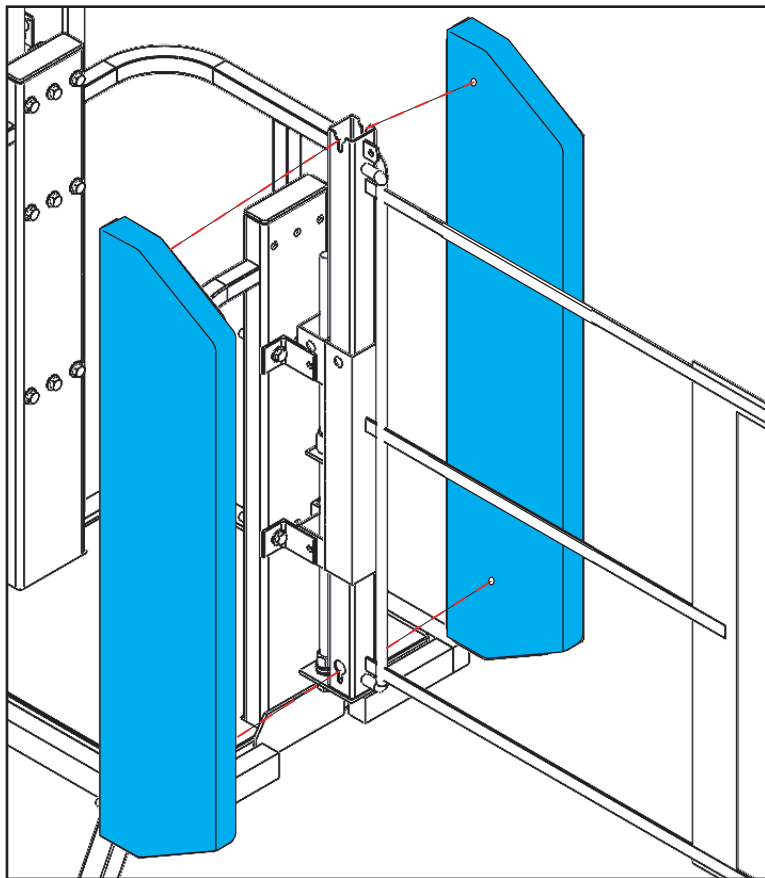


NOTE:

For tight, secure fit, loosen top bolt (as seen in picture to the right) to fit on system. Once the bottom bolt is in place then tighten top bolt with an allen wrench.



C Mast Side Height Adjuster Pads

401, 402

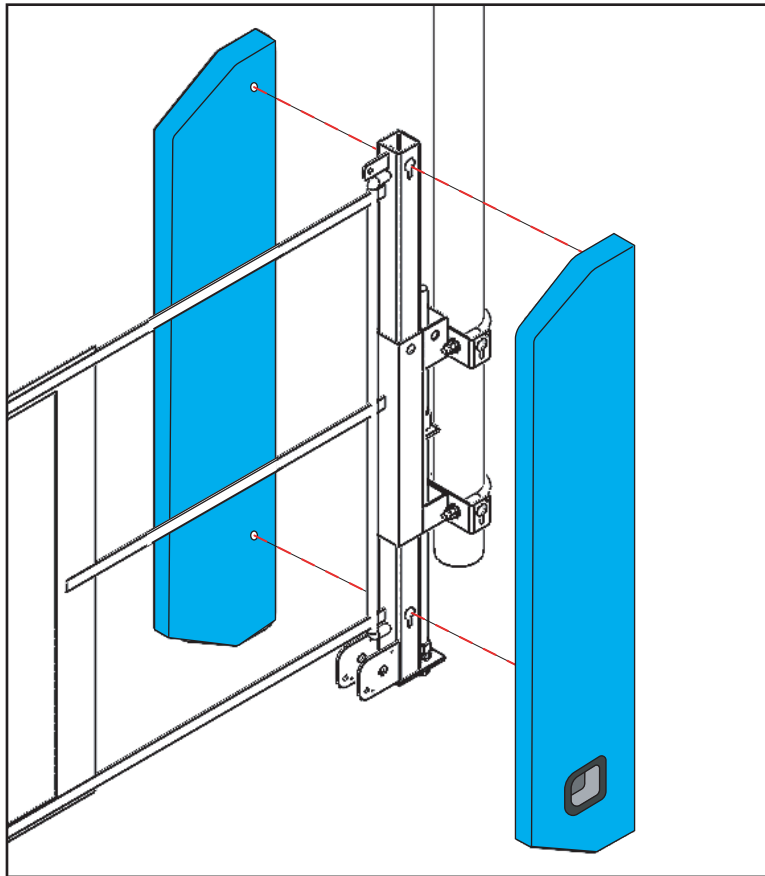


NOTE:

For tight, secure fit, loosen top bolt (as seen in picture to the right) to fit on system. Once the bottom bolt is in place then tighten top bolt with an allen wrench.



D Mast Side Mast Pads

400L, 400R, VINL1920401

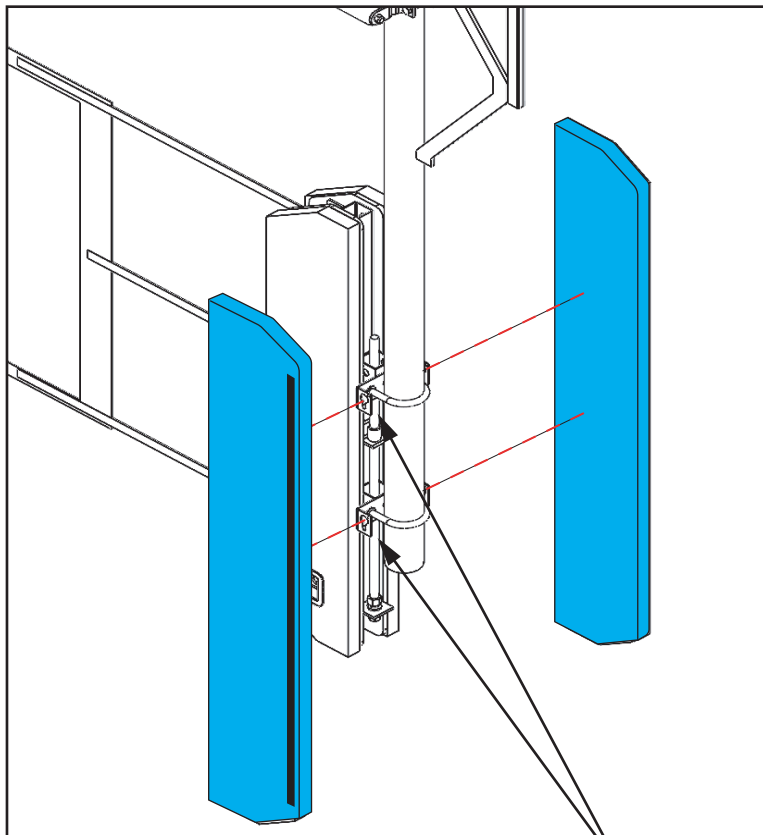


Direction of Brackets Critical



E Judges Stand Wrap Pads

PAD 454, SEWN WRAP PAD, LADDER PADS

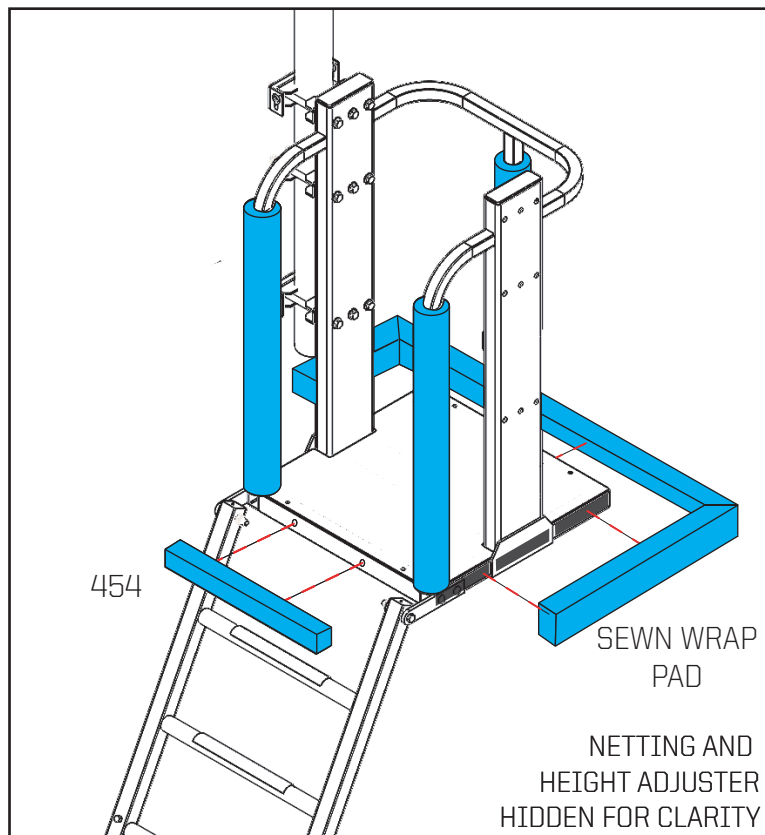

NOTE:

Wrap pads get bolted on from the underside of judges stand. Holes may need to be drilled in field for accurate fit of padding.



Wrap Padding Must Be Attached to Unit for Player Safety.